


Assembly of actuating gear KB55/S/SS

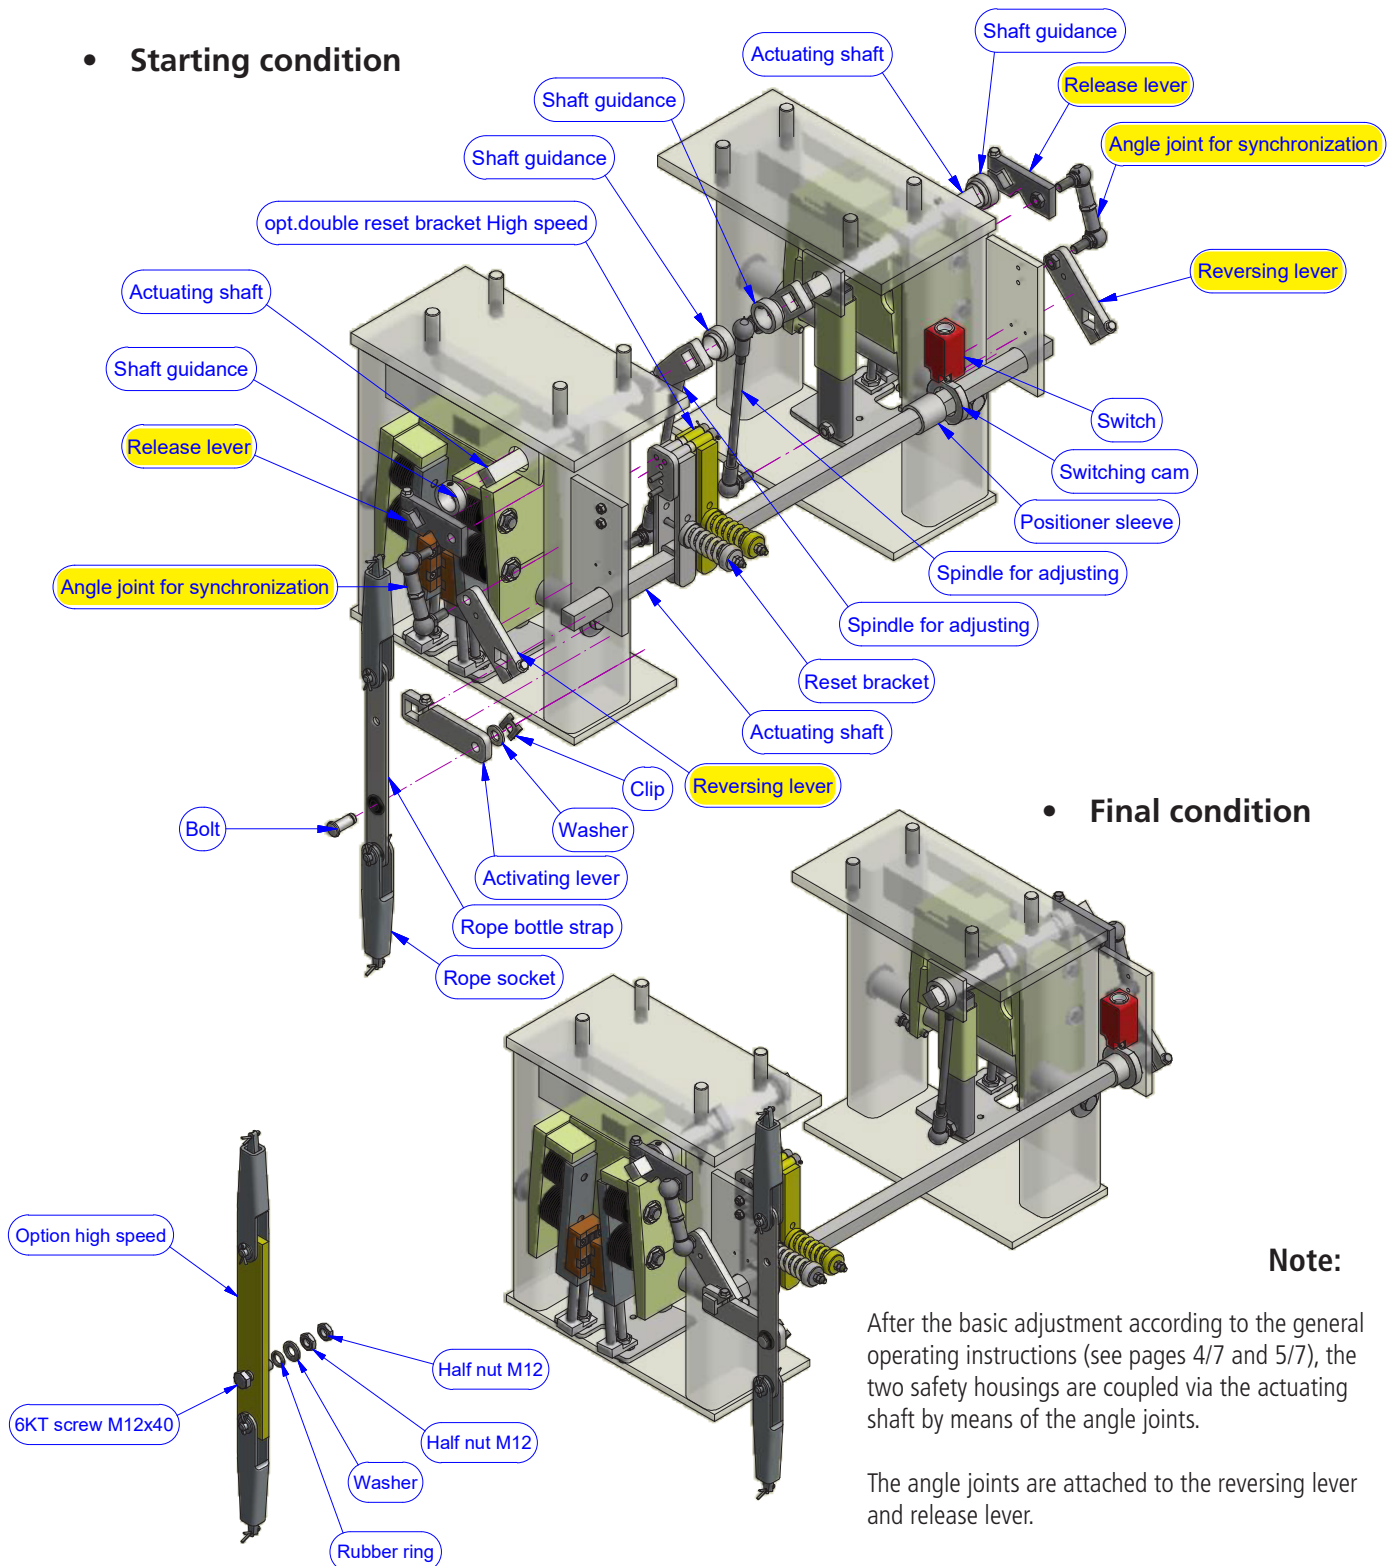

Starting condition



Final condition

Note:

After the basic adjustment according to the general operating instructions (see pages 4/7 and 5/7), the two safety housings are coupled via the actuating shaft by means of the angle joints.

The angle joints are attached to the reversing lever and release lever.

Observe synchronicity!