

ASSEMBLY MANUAL


Page 1 / 3


CHECK AND CONNECTING THE AD20H SYSTEM

Step 1 <u>Remove the manual</u> <u>blockade</u>

Step 2 **Open the safety switch cover**

Before starting the AD20 system, check that the blockade has been removed.

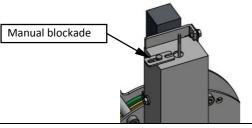

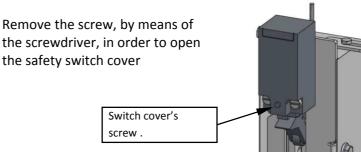


Step 3 <u>Remove the system cover</u>

Remove the fixing screws(3.a) and remove the cover with a slight turning (3.b).

Step 4 <u>Check the working</u>

In order to check that the system works properly:

- 4.1- Pull out the coil pin with the hand (or feed the coil with the right tension) and check the contacts (for example with an electrical tester). Contacts should be commuted, "NO" is closed and "NC" is open.
- 4.2- Remove de coil pin (get it free or without tension) and check that the contacts are not commutes (NO contact is open and NC is closed). When the coil pin is dropped, the system pin could fall in two different ways (see Table 1, step 4), over or under the teeth. It's very important to check that in both positions the contact remains in the same state ("NO" open and "NC" closed). At least should be checked "over the teeth" position, as this is the most unfavorable condition. You can check the teeth position (see table 1).

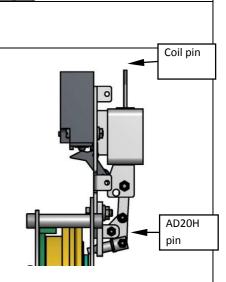

3.b - Remove the system cover

screws


3.a – Remove the fixing



SCHLOSSER LUEZAR & CVR SL. Pol. Malpica, C/F Oeste, nave 7 (Grupo Quejido) 50016 Zaragoza (España) Telf: +34 976 570 976 SICHERHEITSPAKETE In - I SAFETY PACKAGES In - I CONJUNTOS DE SEGURIDAD In



ASSEMBLY MANUAL

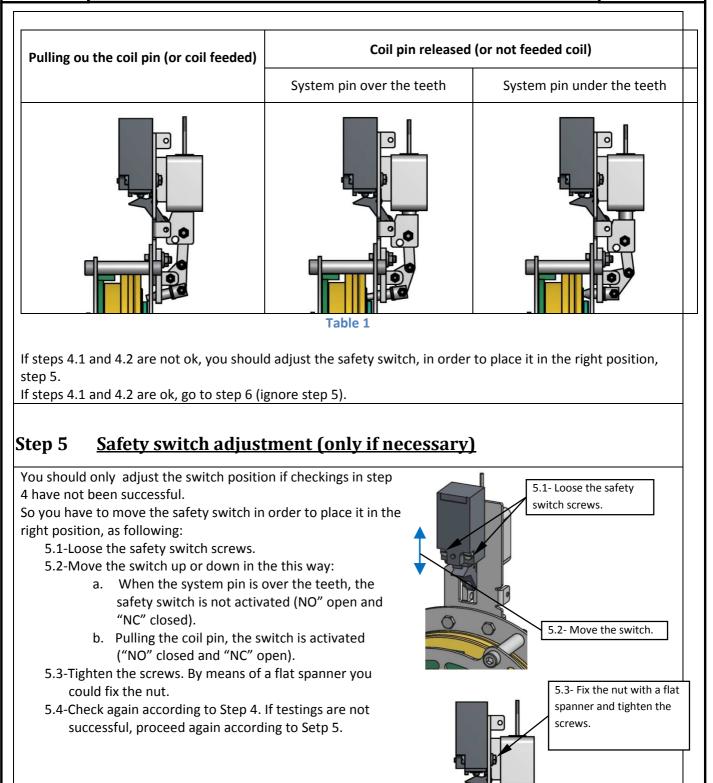



SCHLOSSER LUEZAR & CVR SL. Pol. Malpica, C/F Oeste, nave 7 (Grupo Quejido) 50016 Zaragoza (España) Telf: +34 976 570 976 SICHERHEITSPAKETE I - SAFETY PACKAGES I - SCONJUNTOS DE SEGURIDAD I



SLC-AD20H

ASSEMBLY MANUAL

Page 3 / 3

Step 6 <u>Connecting AD20H</u>

After checking that the switch works properly, connect the safety switch to the lift dashboard. The safety switch has got two possible contacts to connect, 1 "NO" + 1"NC". Connect bearing in mind that:

switch has got two possible contacts to connect, 1 NO + 1 NC. Connect bearing in min			
Lift	Coil	Contact "NC"	Contact "NO"
Stopped (on floor)	Not feeded	Closed	Open
Moving	Feeded	Open	Closed

After connecting the contact, close again the switch cover (tighten the screw, step 2). Then connect the coil to the dashboard (check the tension).

Step 7 <u>Final checkings</u>

Check the system working also with the dashboard functions.



SCHLOSSER LUEZAR & CVR SL. Pol. Malpica, C/F Oeste, nave 7 (Grupo Quejido) 50016 Zaragoza (España) Telf: +34 976 570 976 SICHERHEITSPAKETE I - SAFETY PACKAGES I - CONJUNTOS DE SEGURIDAD I